Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.

GB IE

PRODUCED IN CHINA FOR:

ALDI STORES LTD, PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi,com

AFTER SALES SUPPORT 805731
GB 0345 693 9277 IE 1890 8823 74
www.b-gr8.co.uk
Model:
FS-ARM 4040 05/2021

3 YEAR WARRANTY

User Manual

FERREX®

CORDLESS LAWNMOWER

FS-ARM 4040

Please also follow the instructions and safety instructions for battery and charger (not included).

Original Operating Instructions

Table of contents

Images
Included in delivery/Device parts 6
General 7
Explanation of symbols 7
Safety 9
Proper use 9
Residual risks 10
Safety instructions 10
Before first use 17
Checking the lawnmower and the items supplied 17
Assembling the lawnmower 17
Inserting/removing the rechargeable battery 18
Operation 19
Adjusting the cutting height 19
Switching the lawnmower on/off 20
Using the grass collection box 21
Cleaning and maintenance 22
Replacing the cutting blade 23
Transport and storage 24
Troubleshooting 25
Technical data 27
Spare parts list 28
Declaration of conformity 29
Disposal 30
Disposal of packaging 30
Disposal of the lawnmower 30

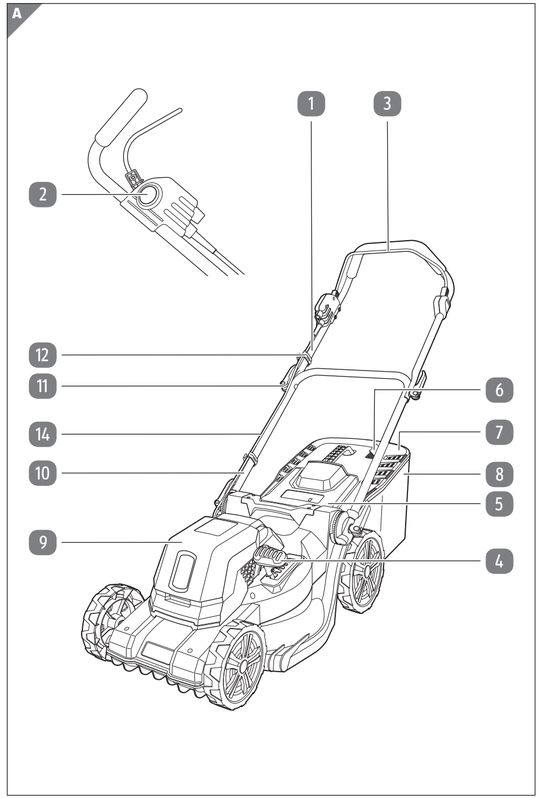

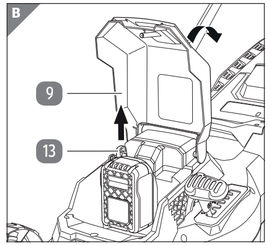

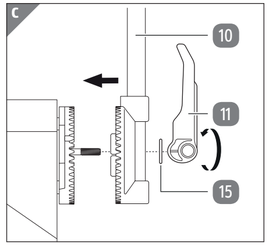

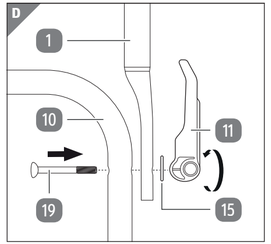

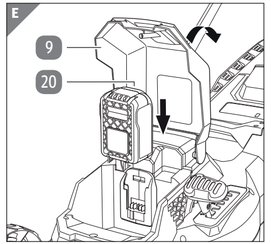

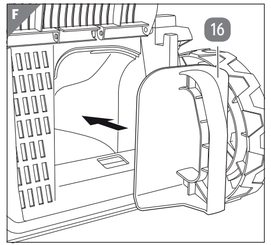

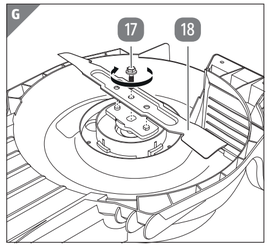

Included in delivery/Device parts

1. Guide shaft
2. Safety button
3. Safety bar
4. Cutting height adjuster
5. Safety flap
6. Fill level indicator
7. Cover (grass collection box)
8. Grass collection box
9. Protective cover
10. Guide bar frame
11. Quick-release fastener, 4x
12. Cable clamp, 2x
13. Safety key
14. Cable
15. Washer (quick-release fastener), 4×
16. Mulchkit
17. Fixing screw (cutting blade)
18. Cutting blade
19. Pin, 2x
20. Unlocking mechanism for battery (battery is not included in the delivery)

A battery and charger are not included in the lawn mower's delivery contents, they must be purchased separately. Only use the batteries referred to in the ‚Technical data' section for the lawn mower, do not operate the mower with batteries from another manufacturer.'